



INSTRUCTION MANUAL

Please read this manual carefully before use

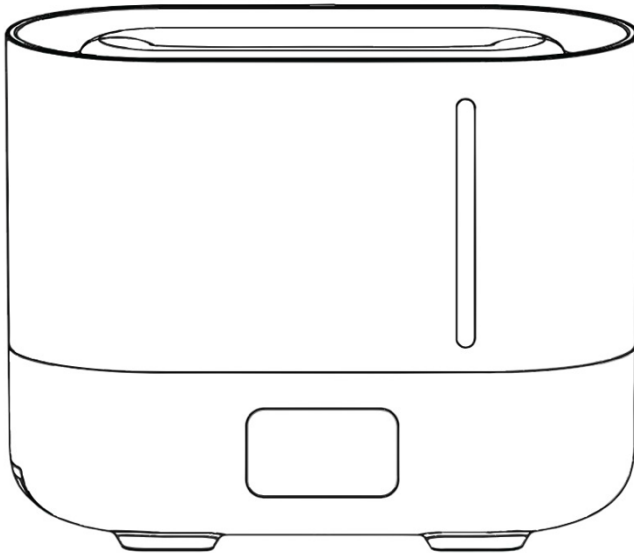

T-2307

Product Structure

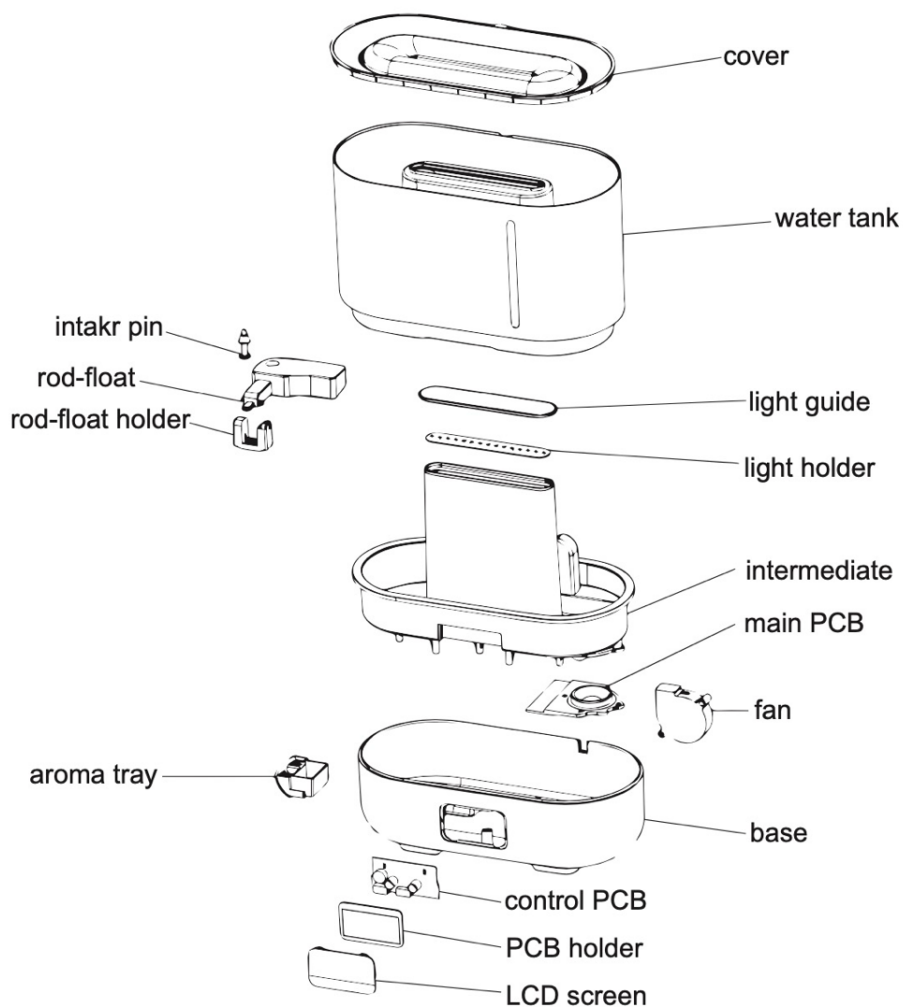

Touch Screen Instruction

- Use power button to turn on/off and adjust the mist level.
- Use light button to turn on/off the flame light effect.

How to Use

1. Place the device on a flat surface, remove the cover, and fill the water tank with clean tap/pure water (ensure the device is unplugged during filling). Note: Water temperature must not exceed 40°C.
2. Put back the cover, wipe away surface moisture, then connect the power supply.
3. After fill/refill, please wait 60-90 seconds for the water to fully enter the base before turning on the device (The screen may report a red low water level alert before the water completely reaches the base).
4. Turn on the device.
5. Unit will automatically power off with red lower water level indicator when empty. Switch off the device, disconnect power, then refill the water tank.

Safety Precautions

- Do not plug in or unplug with wet hands to avoid electric shock.
- If the device is tilted, ensure it is disconnected from power before handling.
- Do not touch the heating element / light element while in use, as it may cause burns.
- Do not disassemble the unit without disconnecting the power to prevent electric shock.

- Do not tamper with the power cord without authorization.
- Unplug the appliance before cleaning and maintenance.
- If the power cord is damaged, it must be replaced by the manufacturer, an authorized service agent, or a qualified professional to avoid hazards.
- This appliance may be used by children aged 8 and above, as well as individuals with reduced physical, sensory, or mental capabilities, provided they are supervised or instructed on safe usage and understand the risks involved.
- Children must not play with the appliance.
- Cleaning and user maintenance should not be performed by children.

Operational Precautions

- **Water Temperature:** Do not add water hotter than 40°C to the water tank or water base, as this may cause discoloration or distortion.
- **Water Exposure Prevention:** Avoid letting water flow into the device body through the air outlet. If water spills outside the device, wipe it immediately with a dry cloth.
- **Low-Temperature Precautions:** If the room temperature drops below 0°C, empty the water tank and water base completely to prevent freezing, which could damage internal components.
- **Prohibited Substances:** Never place metals, chemicals, or detergents into the water tank, as these may cause improper atomization or malfunction.
- **Environmental Placement:** Keep the device away from

direct sunlight, strong light sources, or heat vents.

- **Clearance Requirements:** Maintain a safe distance (at least 25 cm) between the device and furniture, walls, or other electrical appliances to ensure proper ventilation.

Troubleshooting		
Error / Malfunction	Possible Cause	How to Fix
Red Low-water-level alert appears even if I just added water.	Not enough water in the base.	Wait 60-90s to allow water to fully enter the base after filling water.
Water can't reach the base.	The water tank is not in place.	Place the water tank properly.
	The water exceeds the maximum level.	Reduce the water in the tank.
No lights, no wind, and no mist.	Power is not properly connected or the power supply is working.	Check if you have plugged in properly. If the power supply is not working, please contact us in time.
Lights on, but no wind and mist.	Base water level is too high.	Reduce the water in the base. Then, restart the device.
Not enough mist	The atomizing sheet is affected by limescale buildup or excessive water impurities.	Clean atomizer and replace water.

Table of Product Parameters	
Product Name	Ultrasonic Humidifier
Model No.	T-2307
Rated Voltage	110V-220V
Rated Frequency	50Hz
Rated Power	28W
Tank Capacity	3L
Maximum Atomization	300ml/h